





# Oil Premium Illustrations

# mill®


## 1. DESCRIPTION OF THE HEATER

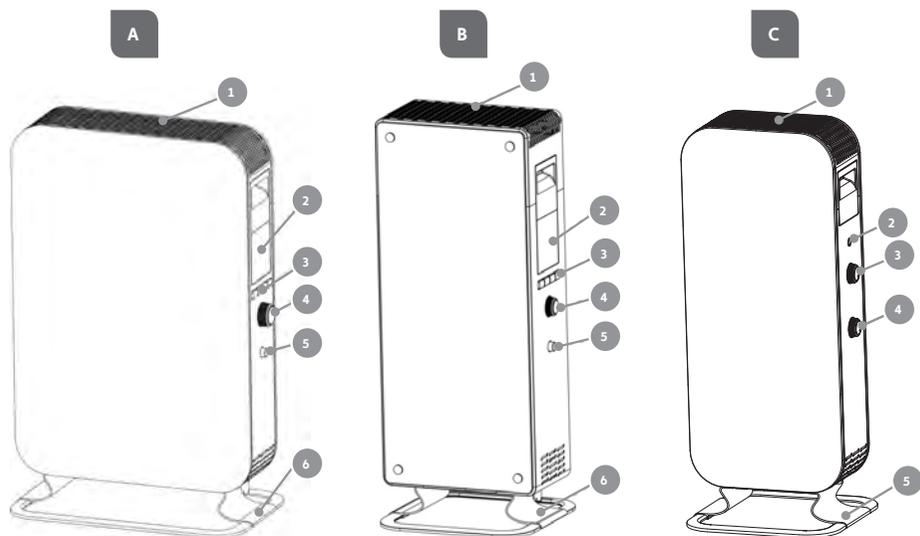


## 2. PARTS

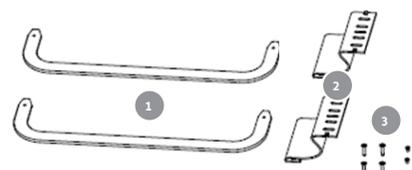


## 4. INSTRUCTION MECHANICAL THERMOSTAT

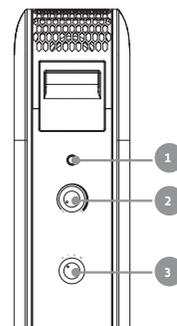


## 3. ASSEMBLY

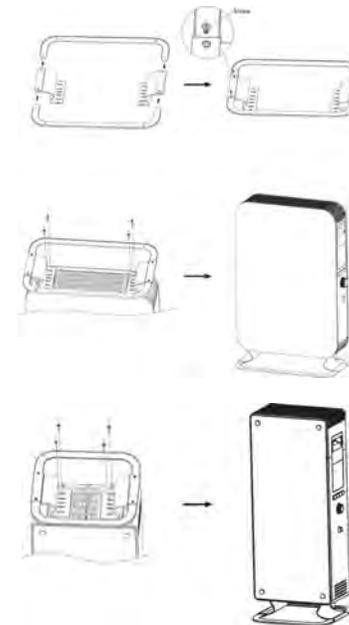


## 5. INSTRUCTIONS DAY/NIGHT THERMOSTAT

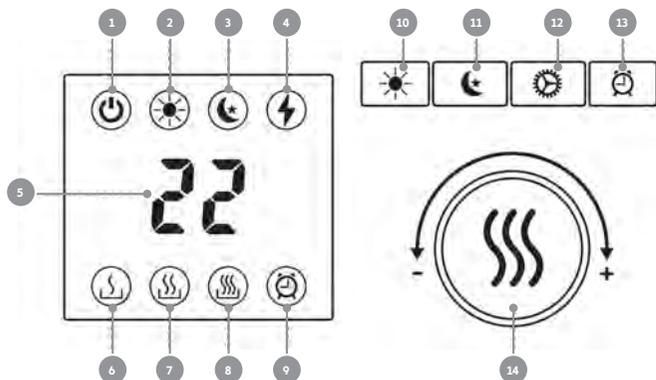

## 6. USAGE DAY/NIGHT THERMOSTAT

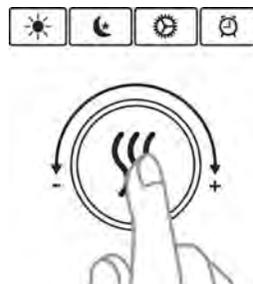


## 7. TIMER FUNCTION

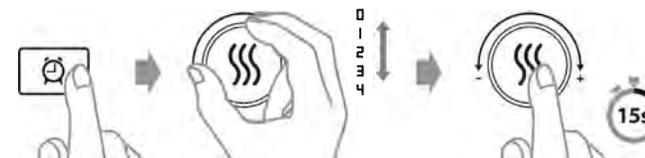




8. HOW TO ACTIVATE DAYTIME SETBACK

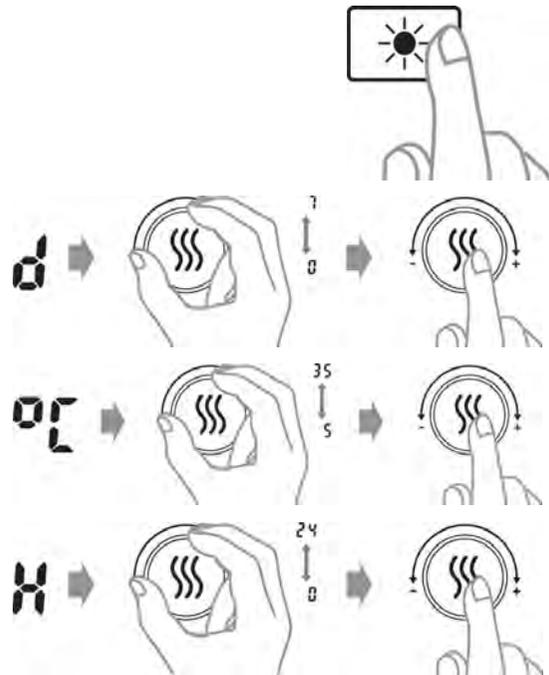

9. HOW TO ACTIVATE NIGHTTIME SETBACK

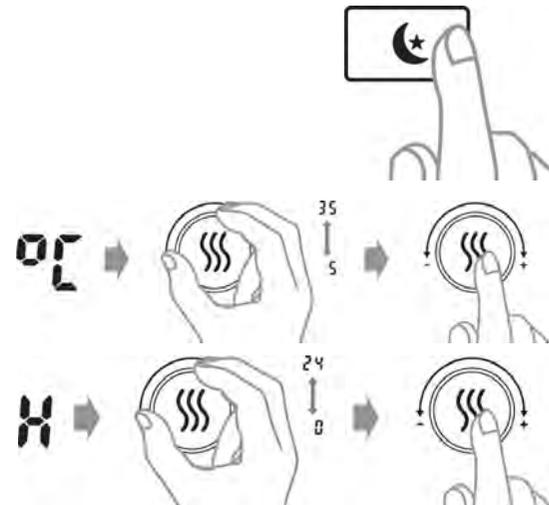

10. CHANGE SETBACK TEMPERATURE – DAYTIME



11. CHANGE SETBACK TEMPERATURE – NIGHTTIME




12. CHANGE NUMBER OF HOURS – DAYTIME



13. CHANGE NUMBER OF HOURS – NIGHTTIME




14. CANCEL (SKIP) SETBACK PERIOD

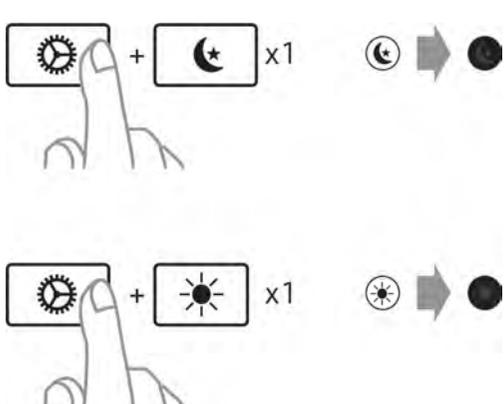

15. DELETE A SETBACK PROGRAM



17. RESETTING THE HEATER

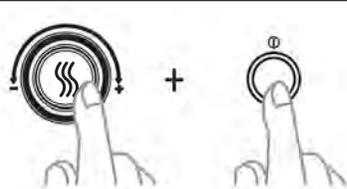

16. TEMPERATURE CALIBRATION

